



Pontalès / Blitz Studio

YOUR DEALER


 
 

- NOTICE D'UTILISATION ■ USER'S MANUAL
- MANUAL DE USO ■ GEBRAUCHSANLEITUNG
- MANUALE D'USO ■ GEBRUIKSAANWIJZING
- BRUKSANVISNING ■ FOLHETO DE UTILIZAÇÃO
- INSTRUKCJA UŻYTKOWANIA ■ BRUKSANVISNING
- ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
- KULLANICI EL KITABI ■ BRUGSANVISNING



Setting your system




1. From your keypad

- Press the  key on the keypad to wake it up
- Enter your access code and press  or  to confirm
- The keypad display will then show the following message 
- The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system is set. The red light on the keypad flashes every two seconds.




 




2. From your remote control

- Press the  button and release after the first beep
- The remote control will then beep twice in confirmation
- The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system is set. The red light on the keypad flashes every two seconds.

Part setting your system





1. From your keypad

- Press the  button on the keypad then press the  button
- Wait for the keypad display 
- Enter your access code and press  or  to confirm
- The keypad display will then show the following message 
- The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system enters part set mode 1. The red light on the keypad flashes every two seconds.



2. From your remote control

- Briefly press the  or  button and release after the first beep
- The remote control will then beep twice in confirmation
- The time delay starts, and short beeping sounds are emitted from the keypad and/or remote internal sirens. At the end of the time delay the system enters part set mode 1 or 2 depending on which button was pressed. The red light on the keypad flashes every two seconds.

Unsetting the system



1. From your keypad

- Press the button on the keypad
- Enter your access code and press or to confirm
- The keypad display will then show the following message



2. From your remote control

- Press the button and release after the first beep sounds
- The remote control will beep twice in confirmation

Set off an alarm



1. From the keypad

- Press the button on the keypad
- Press for 2 seconds.
After 3 short beeps, the control unit will emit a sharp beep
- Press or or




 

2. From your remote control

- Press for more than 2 seconds on one of the bottom buttons.
There are two alarms possible with the remote control:
silent alarm , alarm with siren

You can turn off the siren at any time
by entering your user code followed by
or by pressing the button on your remote control

Unsetting after an alarm (alarm memo)



 

- If an alarm has activated, during the unsetting of your system the screen of the keypad provides you with details of what caused the alarm 
- Press the  button to check the alarm memo and the keypad then gives details of the cause of the alarm  (displayed for 5 seconds)
- Then the keypad goes into standby mode after 40 seconds

Programming your system



 
 


 

 




From your keypad





 


 
1. Accessing programming mode

- To access the various menus press the arrow keys  or  on the keypad

You need to go to level 3 to access management of the access codes

- From the main menu:  
- Press  
- Change the level by pressing twice on  
- Confirm by pressing  
- Enter the level 3 code then press  to confirm 
- Return to the main menu by pressing once on 

2. Add a new access code

 

 
 

 

 
 
- Press  several times until the following screen menu appears 
- Confirm with  button
- Enter an existing level 3 code (master code) and confirm with 
- To record a new code press  once again
- Enter the code (4 to 6 digits) followed by , confirm this code followed by 
- Enter the name associated with this code (SMS type data entry), for example: HELENA, confirm by 

NOTE: Creation of a code generates 2 sub-codes:


Code + 1: code which allows shutdown of the system while generating a silent alarm
Code + 2: code which allows shutdown of the system while generating an audible alarm

Example: Code 1999 will give respectively
2000 (silent alarm) and 2001 (audible alarm)

3. Delete an access code

- Press several times on  until the  menu screen appears
- Confirm with the  key
- Enter an existing level 3 code (master code) and confirm with 
- Then press button  then 
- Using the  button select the code to delete then 
- Confirm deletion by pressing  again

4. Exit from programming mode

- Press the  button for 5 seconds to go back to the main screen